

SMARTconnect X835MV

Smart Power Analyzer



- Measures kWh, kVAh, kW, kVA, PF, Hz, dmd, V, A, etc.
- Bi-directional measurement IMP & EXP
- Total harmonic distortion of voltage and current
- RS485 Modbus communication
- 2 Pulse outputs
- CT and PT operated
- Plug-in solution saves 80% labor
- Easy “clip-in” panel mounting
- Self powered, no need auxiliary supply

USER MANUAL V3.5

Application

SMARTconnect X835MV is an economic solution three phase intelligent power analyzer. It used not only in the electricity transmission and power distribution system, but also in the power consumption measurement and analysis in low and medium voltage intelligent power grid.

This document provides operating, maintenance and installation instructions for SMARTconenct X835MV. The unit measures and displays the characteristics of single phase two wire, three phase three wire and three phase four wire supplies, including voltage, frequency, current, power, active and reactive energy, imported and exported energy. Energy is measured in terms of kWh, kVAh. Maximum demand current can be measured over preset periods of up to 60minutes. The requisite current input(s) are obtained via current transformers (CT).

The SMARTconenct X835MV can be configured to work with a wide range of 333mV CTs, giving the unit a wide range of operation. Built-in interfaces provide pulse and RS485 Modbus RTU outputs.

PART 1 Specification

Input

Norminal input voltage	50-276V AC(L-N) 87-480V AC(L-L)
Max.short duration input voltage	2x nominal voltage for 0.5 second
Nominal input voltage burden	< 0.2VA per phase
Nominal input current	333mV
Nom. input current burden	< 0.1VA
Max. continuous input overload current	120% of nominal
Max. short duration input current	20x nominal current for 0.5 second
Starting current	0.2% Ib
Operating range	Self powered(from any of the three phases)
Supply burden	<2W/ 10VA

Measured Range

Voltage(V)	50-276V AC(L-N) 87-480V AC(L-L)
Current(A)	5-120% of nominal
Frequency(Hz)	45- 66 Hz
Power(W, VAR, VA)	5-120% of nominal (bi-directional)
Energy	8 digits, up to 9999999.9kWh
Power factor	4 quadrants
THD	0-40% up to 63 rd harmonic

Accuracy

Voltage(V)	0.5% of range maximum
Current(A)	0.5% of range maximum
Frequency(Hz)	0.2% of mid-frequency
Power factor(PF)	1% of unity
Active power(W)	1% of range maximum
Reactive power(VAr)	2% of range maximum
Apparent power(VA)	1% of range maximum
Active energy(kWh)	Class 1 IEC62053-21
Reactive energy(KVArh)	Class 2 IEC62053-23
THD	2% to 63 rd harmonic

Environment

Operating temperature	-25°C to +55°C
Storage and transportation temperature	-40°C to +70°C
Relative humidity	0 to 95%, non-condensing
Altitude	up to 2000m
Warm up time	3s
Installation category	CAT III
Mechanical environment	M1
Electromagnetic environment	E2
Ingress protection	IP51(Indoor)
Degree of pollution	2

Output

Pulse output

The meter provides two pulse outputs. Both pulse outputs are passive type.

Pulse output 1 is configurable. The pulse output can be set to generate pulses to represent total/ import/ export kWh or kVArh.

The pulse constant can be set to generate 1 pulse per: 0.01/ 0.1/ 1/ 10/ 100/ 1000 kWh/kVArh.

Pulse width: 200/ 100/ 60ms

Pulse output 2 is non-configurable. It is fixed to total kWh. The constant is 3200imp/kWh.

RS485 output for Modbus RTU

The meter provides a RS485 port for remote communication. Modbus RTU is the protocol applied. For Modbus RTU, the following RS485 communication parameters can be configured by the Modbus command.

Baud rate: 2400, 4800, 9600, 19200, 38400 bps. Default: 9600 bps

Parity: NONE/ EVEN/ ODD

Stop bits: 1 or 2

Modbus Address: 1 to 247

PART 2 Operation

Start-up Screens

	<p>The first screen lights all display segments and can be used as a display check.</p>
	<p>The second screen indicates the firmware installed in the unit and its build number.</p>
	<p>Next the unit performs a self-test and indicates if passes the test.</p>

After a short delay, the screen will display active energy measurements.





Measurements

The buttons operate as follows:

	<p>Selects the voltage and current display screens. In set-up mode, this is the “left” or “back” button.</p>
	<p>Select the frequency and power factor screens. In set-up mode, this is the “up” button.</p>
	<p>Select the power screens. In set-up mode, this is the “down” button.</p>
	<p>Select the energy display screens. In set-up mode, this is the “enter” or “right” button.</p>

1. Voltage and current

Each successive pressing of the  button selects a new range:

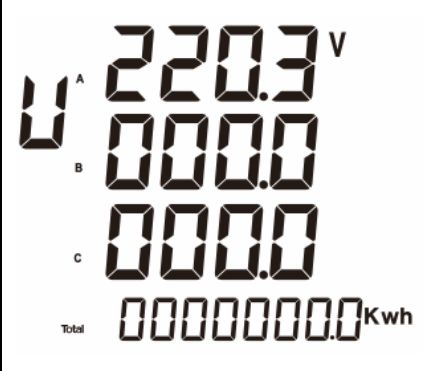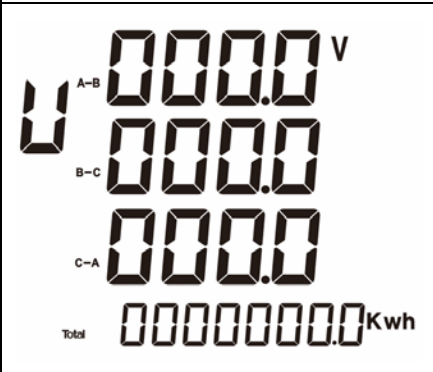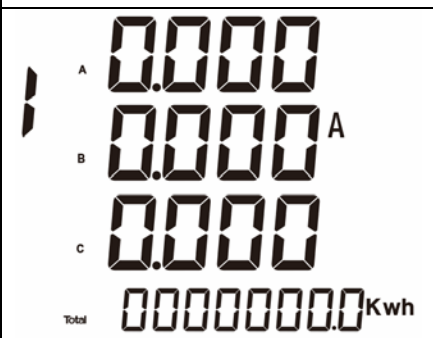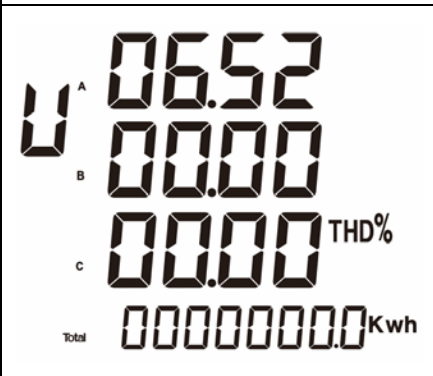	<p>Phase to neutral voltages</p>
	<p>Phase to phase voltages</p>
	<p>Current of each phase</p>
	<p>Phase to neutral voltage THD%</p>

<p>A 00.00 B 00.00 C 00.00 THD% Total 00000000.0 Kwh</p>	<p>Current THD% for each phase</p>
--	------------------------------------

2. Frequency, power factor and demand

Each successive pressing of the  button selects a new range:

<p>Σ 0.000 KW Σ 0.999 PF Σ 50.00 Hz Total 00000000.0 Kwh</p>	<p>Total kW Power factor (total) Frequency</p>
<p>A 0.999 B 0.999 PF C 0.999 Total 00000000.0 Kwh</p>	<p>Power factor of each phase</p>
<p>A 0.000 MAX B 0.000 A Demand C 0.000 Total 00000000.0 Kwh</p>	<p>Max. Current demand</p>

	Max. Power demand
--	-------------------

3. Power

Each successive pressing of the  button select a new range:

	Instantaneous active power (kW)
	Instantaneous reactive power (kVAr)
	Instantaneous apparent power (kVA)

Σ 0.0000 KW Σ 0.0000 Kvar Σ 0.0000 KVA Total 00000000.0 Kwh	Total kW, kVAr, kVA
--	---------------------

4. Energy measurements

Each successive pressing of the  button selects a new range:

Total 00000000.0 Kwh	Total active energy in kWh
Total 00000000.0 Kvarh	Total reactive energy in kVArh
Imp 00000000.0 Kwh	Imported active energy in kWh
Exp 00000000.0 Kwh	Exported active energy in kWh
Imp 00000000.0 Kvarh	Imported reactive energy in kVArh
Exp 00000000.0 Kvarh	Exported reactive energy in kVArh

Set Up

Long press button  to enter the set-up interface.









The default password is 1000. If the input is wrong, the LCD displays “PASS Err”.



Press the button  to exit set-up interface.

Set-up Mode

1. Modbus address







	<p>The default address is 001. Press  to activate the modification.</p>
	<p>Use  and  buttons to set the address with the range 001~247, and press the button  for confirmation.</p>
<p>Press  to confirm the setting and press  to return to the main set-up menu.</p>	

2. Baud rate










	<p>From the set-up menu, use M and P buttons to select the baud rate option. The default is 9600bps.</p>
	<p>Press E to enter the selection routine. The baud rate setting will flash. Use M and P buttons to choose baud rate 2.4k, 4.8k, 9.6k, 19.2k, 38.4k.</p>
<p>Press E to confirm the setting and press UI to return to the main set-up menu.</p>	

3. Parity

	<p>From the set-up menu, use M and P buttons to select the parity option(ODD/ EVEN/ NONE). Default is NONE.</p>
--	---

	<p>Press  to enter the selection routine. The current setting will flash.</p> <p>Use  and  buttons to choose parity (EVEN/ ODD/ NONE).</p>
<p>Pressing  to confirm the setting and press  to return to the main set-up menu.</p>	

4. Stop bits

	<p>From the set-up menu, use  and  buttons to select the stop bit option (1/ 2). Default it 1.</p>
	<p>Press  to enter the selection routine. The current setting will flash.</p> <p>Use  and  buttons to choose stop bit (1/ 2). Please note stop bits can only be set 2 when parity is NONE.</p>
<p>Press  to confirm the setting and press  to return to the main set-up menu.</p>	

5. CT










	<p>The Secondary CT is fixed 0.333V and can not be set.</p>
	<p>Press to enter the CT1 set-up interface. The range is from 0001~9999.</p>
<p>Press to confirm the setting and press to return to the main set-up menu.</p>	

6. PT

	<p>From the set-up menu, use and buttons to select the PT option. The screen will show the voltage secondary PT voltage value. The range is from 100~500. Default is 400.</p>
	<p>Press to enter the PT rate set-up interface. The range is from 0001~2000. Default is 0001.</p>
<p>Press to confirm the setting and press to return to the main set-up menu.</p>	




7. Pulse output

This option allows you to configure the pulse output. The output can be set to provide a pulse for a defined amount of energy active or reactive.

	<p>From the set-up menu, use  and  buttons to select the pulse output option.</p>
	<p>Press  to enter the selection routine. The unit symbol will flash.</p> <p>Use  and  buttons to choose kWh or kVArh.</p>
<p>Press  to confirm the setting and press  to return to the main set-up menu.</p>	

8. Pulse constant

Use this to set the energy represented by each pulse. Rate can be set to 1 pulse per 0.01/ 0.1/ 1/ 10/ 100/ 1000 kWh/kVArh.

	<p>From the set-up menu, use  and  buttons to select the pulse rate option.</p>
---	---

	<p>Press to enter the selection routine. The current setting will flash.</p> <p>Use and buttons to choose pulse rate. 1 pulse = 0.01/ 0.1/ 1/ 10/ 100/ 1000 kWh/ kVArh 0.01/ 0.1/ 1/ 10/ 100/ 1000 kWh/ kVArh per pulse.</p>
<p>Press to confirm the setting and press to return to the main set-up menu.</p>	

9. Pulse duration

	<p>From the set-up menu, use and buttons to select the pulse width option.</p>
	<p>Press to enter the selection routine. The current setting will flash.</p> <p>Use and buttons to choose pulse width(200/ 100/ 60ms, the default set-up is 200ms).</p>
<p>Press to confirm the setting and press to return to the main set-up menu.</p>	

10. DIT(Demand integration time)

This sets the period in minutes over which the current and power readings are integrated for maximum demand measurement. The options are: 0(off), 5, 8, 10, 15, 20, 30, 60 minutes.

	<p>From the set-up menu, use M and P buttons to select the dit option. The screen will show the currently selected integration time. Default is 60 minutes.</p>
	<p>Press E to enter the selection routine. The current time interval will flash. Use M and P buttons to select the time required.</p>
<p>Press E to confirm the setting and press UI to return to the main set-up menu.</p>	

11. Backlit set-up

The meter provides a function to set the white backlit lasting time.

	<p>The backlit lasting time is settable. Default lasting time is 60minutes. For example, if it's set as 5, the backlit will be off in 5minutes from the last time operation on the meter. Notes: If it's set as 0, the backlit will always be on.</p>
--	---

	<p>Press to enter the selection routine. The current time interval will flash.</p> <p>The options can be: 0/ 5/ 10/ 30/ 60/ 120minutes</p>
<p>Use and buttons to select the time required. Then press to confirm the set-up.</p>	

12. Supply system

Use this section to set the type of power supply being monitored.

	<p>From the set-up menu, use and buttons to select the system option. The screen will show the currently selected power supply.</p>
	<p>Press to enter the selection routine. The current selection will flash.</p> <p>Use and buttons to select the required system option: 3P4W, 3P3W or 1P2W.</p>
<p>Press to confirm the setting and press to return to the main set-up menu.</p>	








13. Clear kWh

	<p>From the set-up menu, use M and P buttons to select the reset option.</p>
	<p>Press E to enter the selection routine. The yes will flash.</p>
<p>Press E to confirm the setting and press UI to return to the main set-up menu.</p>	






14. Clear kVArh

	<p>From the set-up menu, use M and P buttons to select the reset option.</p>
	<p>Press E to enter the selection routine. The yes will flash.</p>
<p>Pressing E to confirm the setting and pressing UI to return to the main set-up menu.</p>	

15. Clear Max demand

	<p>From the set-up menu, use  and  buttons to select the reset option.</p>
	<p>Press  to enter the selection routine. The yes will flash.</p>
<p>Press  to confirm the setting and press  to return to the main set-up menu.</p>	

16. Change password

	<p>Use the  and  to choose the change password option.</p>
	<p>Press the  to enter the change password routine. The new password screen will appear with the first digit flashing.</p>

<p>PASS</p> <p>1000</p>	<p>Use M and P to set the first digit and press E to confirm your selection. The next digit will flash.</p>
<p>PASS</p> <p>1000</p>	<p>Use M and P to set the second digit and press E to confirm your selection. The next digit will flash.</p>
<p>PASS</p> <p>1000</p>	<p>Use M and P to set the third digit and press E to confirm your selection. The next digit will flash.</p> <p>Use M and P to set the forth digit and press E to confirm your selection.</p>
<p>Press E to confirm the setting and press UI to return to the main set-up menu.</p>	

17. Auto display in turns

<p>SET</p> <p>AUTO</p> <p>5</p>	<p>From the set-up menu, use M and P buttons to select page.</p> <p>Press the button E to activate the modification on the time.</p> <p>Options: 001-255 seconds</p> <p>Default is 5 seconds.</p>
---------------------------------	--

	<p>Use the M and P to set the auto display interval time.</p>
<p>Press E to confirm the setting and press UI to return to the main set-up menu.</p>	


18. Reverse connected current inputs correction setting

	<p>From the set-up menu, use M and P buttons to select page.</p>
	<p>Press E to enter Phase A , the default is FRD (forward).</p>
	<p>Use M and P buttons to Phase B or C setting pages.</p>
<p>Press button E to confirm the setting and press UI to return to the main set-up menu.</p>	


19. How to operate if phase A is reversely connected

	<p>Press to enter Phase A.</p>
	<p>Press to enter the selection routine. The FRD will flash.</p> <p>Use button to change FRD to REV.</p>
<p>Press to confirm the setting and press to return to the main set-up menu.</p>	


Dimensions

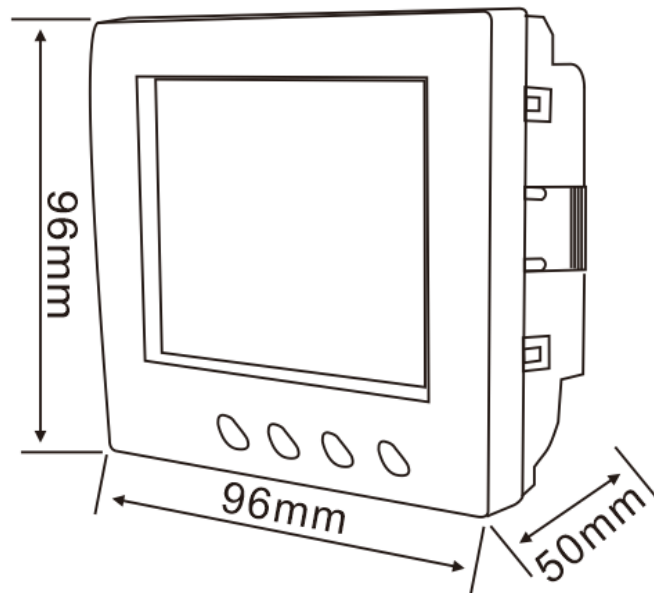


Wiring Diagram

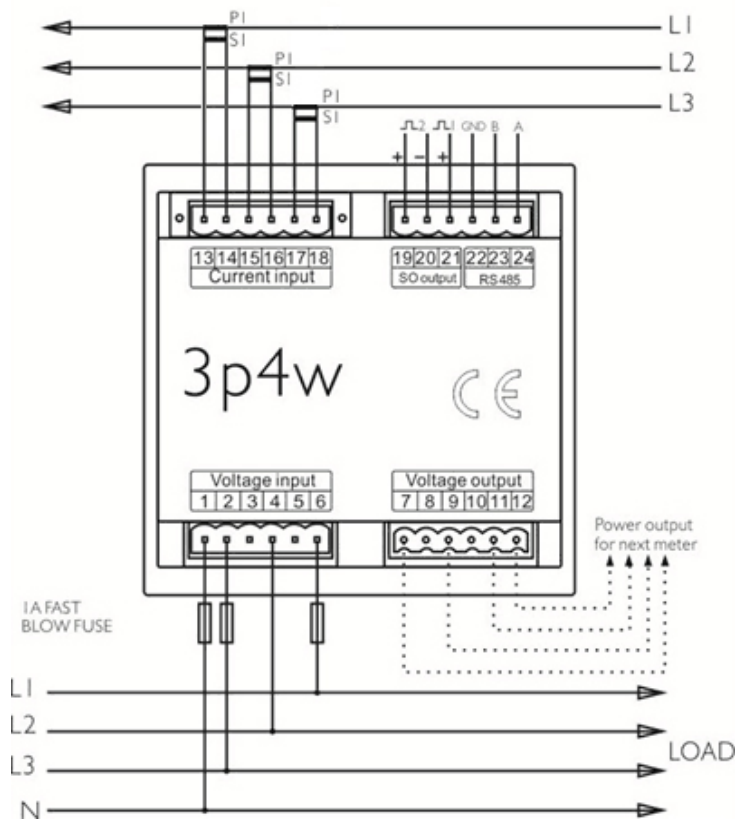

3-Phase 4-Wire

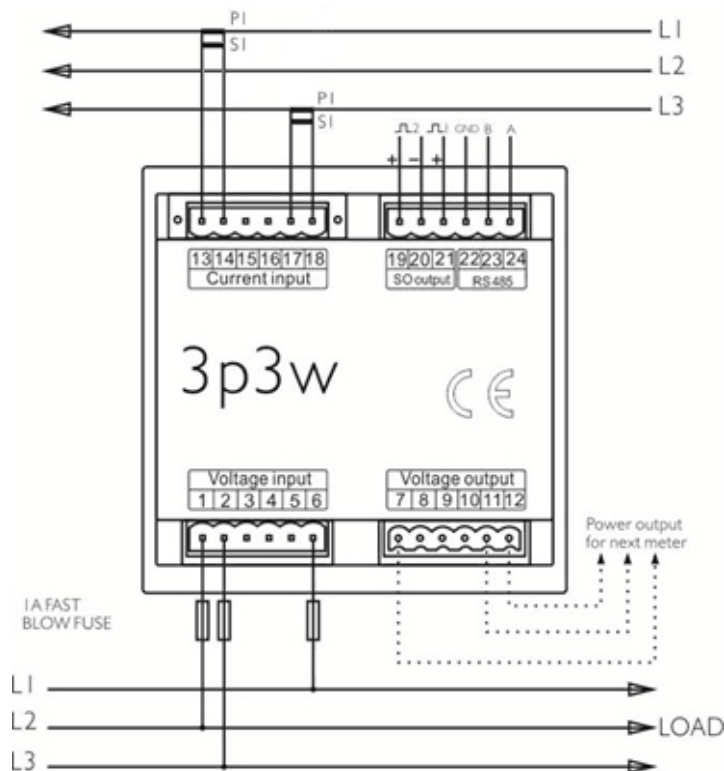

3-Phase 3-Wire

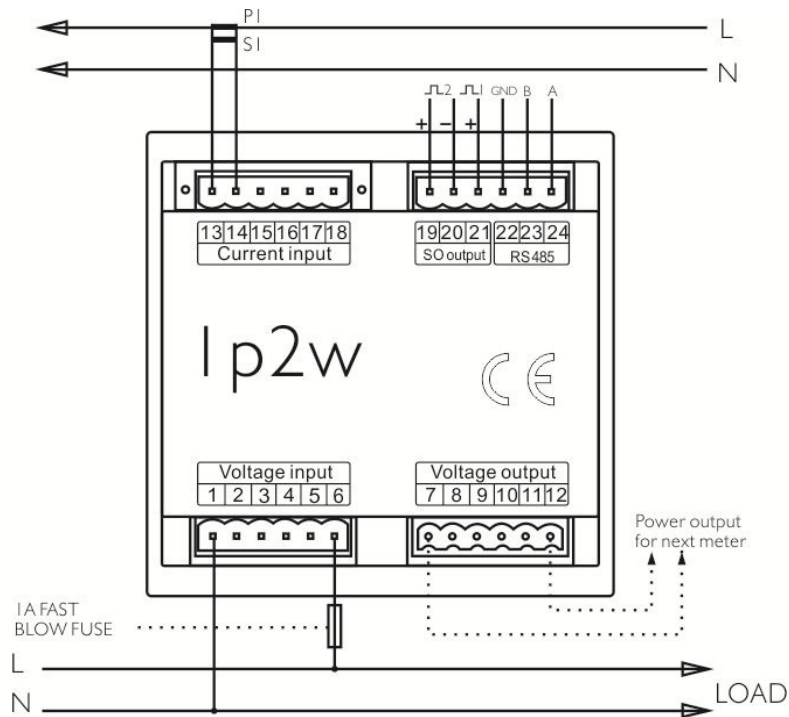

1-Phase 2-Wire

If you have any question, please feel free to contact our sales team.

Zhejiang Eastron Electronic Co., Ltd.

No.1369, Chengnan Rd. Jiaxing, Zhejiang, 314001, China

Tel: +86-573-83698881 Fax: +86-573-83698883

Email: sales@eastrongroup.com

www.eastrongroup.com